




 


 

 
 






	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut/Preloaded spring		High strength zone		Zone requiring special attention		
	Battery low voltage		Ultra capacitor, low voltage		Fuel tank		Gas tank		Safety valve
	High voltage battery pack		High voltage power cable/component		Disconnect high voltage		Fuse box disabling high voltage system		Ultra capacitor, high voltage



50kW Li-ion Battery

— Electrical wires 220 - 400V



Capacity indicator

Energy Flux
Loading Level
& remaining autonomy

eService Plug

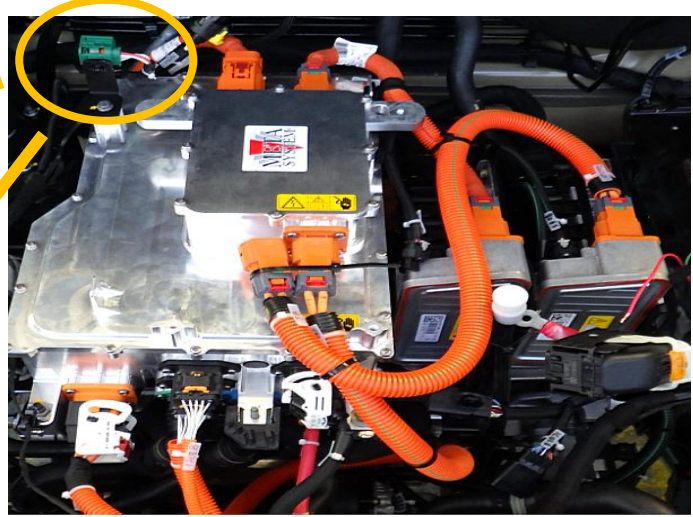
= High Voltage Cut device



Closed



Open



Firemen
only



BATTERY CONSIGNATION RULES

3

1 Use Safety equipments



2 Disconnect the eService PLUG



3 Lock the eService PLUG (with a padlock)



4 Disconnect the positive ring from the 12V battery (and wait 2 minutes)



5 Lock the positive ring in a safety bag and put a sticker



6 Disconnect the 3 power connectors from the HV battery

